User's Manual
V3.21

Contents

1. Introduction.....3

1.1 *Features* 3

1.2 *System Requirements*..... 4

1.3 *Precautions of Use ……*..... 4

2. Driver Installation..... 5

Driver Installation for Windows 98/98SE..... 5

3. Disclaimer.....7

1. Introduction

Thank you for your purchasing this Hi-speed USB 2.0 Flash Disk. This portable Plug&Play USB Flash Disk enables you to exchange huge amount of data easily between any computers with a USB port. With high storage capacity and blazing fast speeds, this handy small device is the best choice to replace floppy disks, ZIP disks and hard disks. In addition, this Hi-speed USB Flash Disk provides utility programs that you can partition the disk with great flexibility and set Security Area with password check to protect your personal data. With this gadget from the latest storage trend, you will enjoy its convenience in your daily life.

1.1 Features

- **Portable and secure removable mass storage for business and personal use**
- **Full Compliance with USB spec v2.0 and v1.1; true Plug&Play connection**
- **Data transfer rate up to 33MB/s for Reading, 22MB/s for Writing in Dual-channel mode**
- **Data transfer rate up to 20MB/s for Reading, 9MB/s for Writing in Single-channel mode**
- **USB bus power: Powered from USB port, no external power or battery needed**
- **Multiple Operation Systems supported: No driver needed in Windows® 2000, Windows® XP, Windows® ME, Mac™ 9.x or later, Linux™ Kernel 2.4 or later.**
  Only Windows® 98 and Windows® 98SE need the enclosed driver
- **Disk partitions and Security Area with password check**
- **Shock resistant, noise-free and long data retention**

Note: The read/write speed of the USB Flash Disk depends on the Flash memory type inside the device and also on the computer's system performance.

1.2 System Requirements

- **Desktop or laptop computers with USB 1.1 or USB 2.0 port**
  - **One of following operation systems**

Windows 98/98SE

Windows ME

Windows 2000

Windows XP

Mac OS 9.x or later

Linux Kernel 2.4 or later

1.3 Precautions of Use

Please read this manual carefully before using this USB drive and all its accompany application tools in order to safely use this USB drive.

The following items will tell you how to operate this product correctly and safely. Please read carefully and make sure you understand the items before reading any other portion of this manual.

WARNING!

1. Please keep this Hi-speed USB 2.0 Flash Disk away from heat, direct sunlight, and water. Do not bend, flex, or drop it.
2. To prevent data loss and fatal damage to the USB 2.0 Flash Disk, please never remove it from the USB port while data is being transferred. It is advised that user perform "Safety Remove Hardware" by selecting "USB Mass Storage Device" before removing the Flash Disk.
3. Due to OS security control, in Windows 2000 or Windows XP you must be logged in with local Administrator rights to run the Disk Partitions and Security Function.

(The programs named UFDUtility **) If your account does not have the Administrator rights, please contact your system administrator for assistance.**
4. If you re-start the computer and your USB 2.0 Flash Disk is in Unlocked mode (Have the right to access Security Area), please unplug the USB 2.0 Flash Drive to make sure it is back to Public Area.

2. Driver Installation

To use this Hi-speed USB 2.0 Flash Disk, it is not necessary to install any driver in Windows® ME, Windows® 2000, Windows® XP, Mac TM 9.x or later, Linux TM Kernel 2.4 or later. Only Windows® 98 and Windows® 98SE need to install the enclosed driver.

Driver Installation for Windows 98/98SE

1. Please execute setup.exe to install USB Flash Disk Windows 98/98SE driver. The icon is shown as:
Setup.exe

2. The Setup Wizard will show up as below, please click **Next >** to continue.

Setup - USB Flash Disk 98 Driver
Welcome to the USB Flash Disk 98 Driver Setup Wizard
This will install USB Flash Disk 98 Diiver v1.0 on your computer.
It is recommended that you close all other applications belore continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

3. It is now ready to install the driver. Please click **Install** to continue the installation.

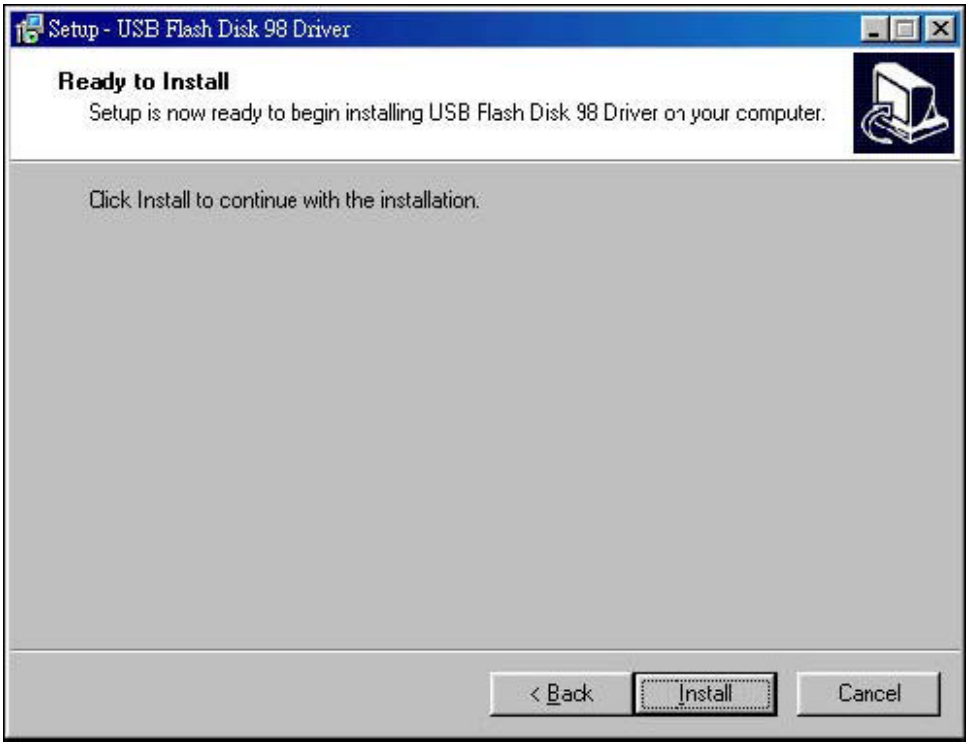
Setup - USB Flash Disk 98 Driver
Ready to Install
Setup is now ready to begin installing USB Flash Disk 98 Driver on your computer.
Click Install to continue with the installation.
< Back
Install
Cancel

4. Executing Setup.exe will guide you to install the USB Flash Disk Windows 98/98SE driver on your computer.

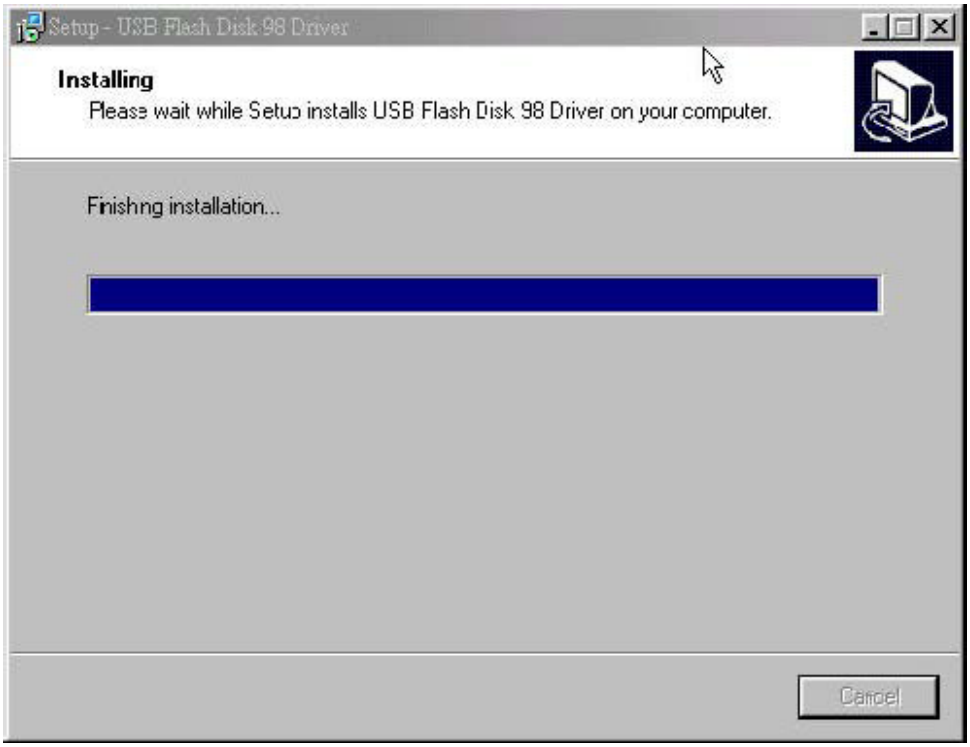
Setup - USB Flash Disk 98 Driver
Installing
Please wait while Setup installs USB Flash Disk 98 Driver on your computer.
Finishing installation...
Cancel

5. The installation has completed, please click **Finish** to exit Setup.

Setup - USB Flash Disk 98 Driver
Completing the USB Flash Disk 98 Driver Setup Wizard
Setup has finished installing USB Flash Disk 98 Driver on your computer.
Click Finish to exit Setup.
Finish

6. The following window will show up when driver installation has finished. Please re-plug in
USB Flash Disk to activate the driver.

3. Disclaimer

All the information in this document is subject to change without prior notice. The manufacturer makes no representations or any warranties regarding the Contents of this manual. The information contained in this manual is provided for the general use by the customers. No part
of this document may be reproduced or transmitted in any form by any means without the express written permission of the manufacturer. All brand names and product names used in this document are trademarks or registered trademarks of their respective holders.